

# YOU SEE®

## Performance of different devices with E-WERK, ref. no. 361

Busch & Müller vouches solely for a faultless functioning of the E-WERK. Exempt from liability is any damage to connected devices of all kinds. It cannot be guaranteed that the E-WERK is able to power all connectable devices. For example, some mobile devices only use their internal battery during operation and cannot be charged at the same time, also not by the E-WERK. Please contact the device's manufacturer for information! However, the E-WERK is able to charge an external battery, e.g. our cache battery 461A (not included). With it, such devices can be recharged after the trip. Other rare exceptions are devices whose technical properties prevent them from being charged while riding the bike because of voltage fluctuations. They, too, can be powered by the E-WERK using an adequate cache battery.

The following list provides an overview of different mobile devices, and how they can be powered and/or charged by the E-WERK. This list makes no claim to be complete. Please consider that software updates and technical changes on the part of the device's manufacturer might render this information incorrect.

Operation with E-WERK presupposes fitting cable connections.

Additions and corrections are welcome anytime. Please email them to:

[E-WERK@bumm.de](mailto:E-WERK@bumm.de)

rev: 15.12.2009

## Performance of different devices with E-WERK, ref. no. 361

### Mobile phones

| Manufacturer  | Model        | Powering/<br>charging by<br>E-WERK<br>directly | Powering/<br>charging by<br>cache<br>battery | Charging by<br>cache battery<br>after use |
|---------------|--------------|--|--|---|
| Apple         | iPhone 3G    | X  | X  | X   |
| Apple         | iPhone 3Gs   | -  | X  | X   |
| HTC           | Touch HD     | X  | X  | X   |
| HTC           | Touch Pro    | X  | X  | X   |
| HTC           | Touch Pro 2  | X  | X  | X   |
| Motorola      | V3           | X  | X  | X   |
| Nokia         | 2610         | X  | X  | X   |
| Nokia         | 3110         | X  | X  | X   |
| Nokia         | 3330         | X  | X  | X   |
| Nokia         | 5310         | X  | X  | X   |
| Nokia         | 6710         | X  | X  | X   |
| Nokia         | 6120c        | X  | X  | X   |
| Nokia         | 6230i        | X  | X  | X   |
| Nokia         | 6310i        | X  | X  | X   |
| Nokia         | 6600 Slide   | X  | X  | X   |
| Nokia         | E63          | X  | X  | X   |
| Nokia         | E71          | X  | X  | X   |
| Nokia         | E75          | X  | X  | X   |
| Nokia         | N70          | X  | X  | X   |
| Nokia         | N79          | X  | X  | X   |
| Nokia         | N82          | X  | X  | X   |
| Nokia         | N85          | X  | X  | X   |
| Nokia         | N95          | X  | X  | X   |
| Nokia         | N96          | X  | X  | X   |
| O2            | XDA Diamond  | X  | X  | X   |
| Samsung       | SGH E 590    | X  | X  | X   |
| Siemens       | A55          | X  | X  | X   |
| Sony Ericsson | C902         | X  | X  | X   |
| Sony Ericsson | K330         | X  | X  | X   |
| Sony Ericsson | K750i        | X  | X  | X   |
| Sony Ericsson | K800i        | X  | X  | X   |
| T-Mobile      | MDA Vario IV | X  | X  | X   |
| Vodafone      | Magic        | X  | X  | X   |

### MP3-Player

| Manufacturer | Model            | Powering/<br>charging by<br>E-WERK<br>directly | Powering/<br>charging by<br>cache<br>battery | Charging by<br>cache battery<br>after use |
|--------------|------------------|--|--|---|
| Apple        | iPod Video 60 GB | X  | X  | X   |

## Batteriepack

| Manufacturer | Model | Charging by E-WERK directly |
|--------------|-------|-----------------------------|
| VarioTek     | PP320 | X                           |

## Navigationsgeräte

| Manufacturer | Model                     | Powering by E-WERK directly | Charging by E-WERK directly | Powering by cache battery | Charging by cache battery | Charging by cache battery after use |
|--------------|---------------------------|-----------------------------|-----------------------------|---------------------------|---------------------------|-------------------------------------|
| Falk         | N150                      | X                           | X                           | X                         | X                         | X                                   |
| Garmin       | Colorado 300              | -                           | X                           | -                         | X                         | X                                   |
| Garmin       | Dakota 10                 | -                           | -                           | -                         | -                         | X                                   |
| Garmin       | Dakota 20                 | -                           | X                           | -                         | X                         | X                                   |
| Garmin       | Edge 705, Vers. 2.6       | X                           | -                           | X                         | -                         | -                                   |
| Garmin       | Edge 705, Vers. 2.9       | -                           | X                           | -                         | X                         | X                                   |
| Garmin       | Etrex Vista HCx           | X                           | X                           | X                         | X                         | X                                   |
| Garmin       | GPSmap 60 Cx              | X                           | X                           | X                         | X                         | X                                   |
| Garmin       | GPSmap 60 CSx             | X                           | X                           | X                         | X                         | X                                   |
| Garmin       | Oregon 200                | -                           | -                           | -                         | -                         | X                                   |
| Garmin       | Oregon 300                | -                           | -                           | -                         | -                         | X                                   |
| Garmin       | Oregon 400t               | X                           | -                           | X                         | -                         | X                                   |
| Garmin       | Oregon 500                | X                           | X                           | X                         | X                         | X                                   |
| Garmin       | Oregon 550                | X                           | X                           | X                         | X                         | X                                   |
| Garmin       | Oregon 550t <sup>1)</sup> | X                           | X                           | X                         | X                         | X                                   |
| Lowrance     | Endura                    | X                           | X                           | X                         | X                         | X                                   |
| MyNav        | 600 Pro                   | X                           | X                           | X                         | X                         | X                                   |
| Satmap       | Active 10                 | X                           | X                           | X                         | X                         | X                                   |
| TwoNav       | Aventura                  | X                           | X                           | X                         | X                         | X                                   |

<sup>1)</sup> powering by cache battery recommended